

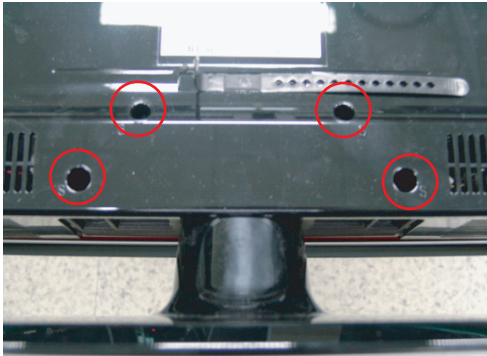
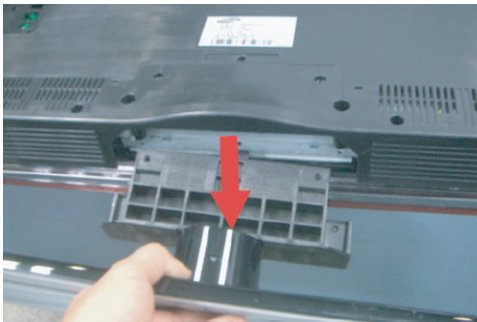
3. Disassembly and Reassembly

This section of the service manual describes the disassembly and reassembly procedures for the LN40B530P2M LCD TV.

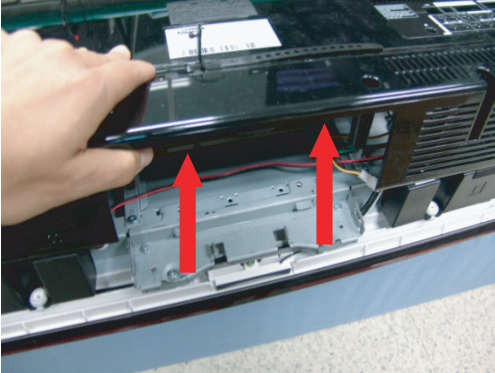
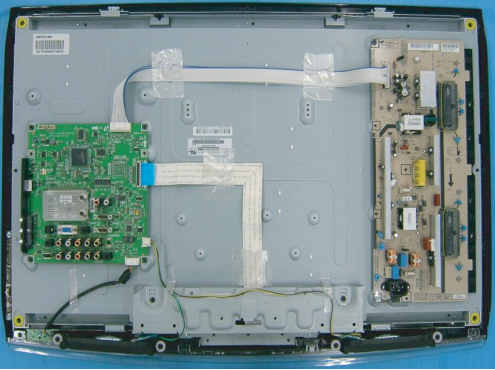
⚠ WARNING: This LCD TV contains electrostatically sensitive devices. Use caution when handling these components.

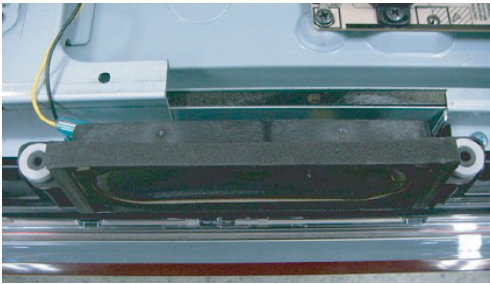
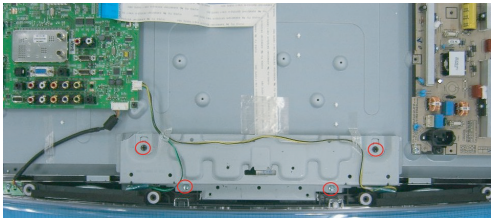
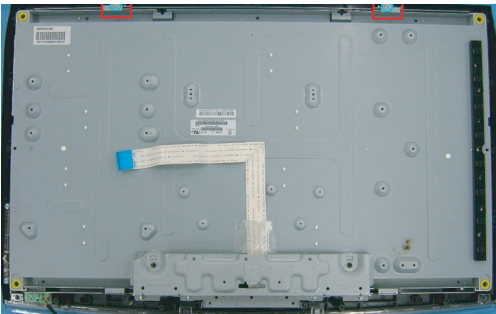
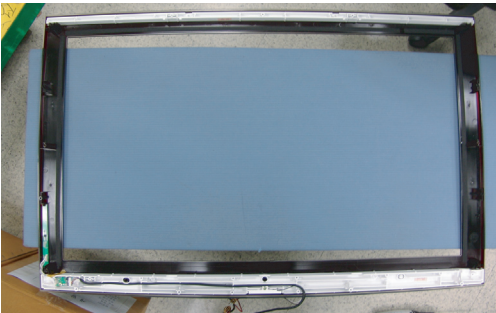
3-1. Disassembly and Reassembly

- ⚠ Cautions:**
- 1. Disconnect the LCD TV from the power source before disassembly.
 - 2. Follow these directions carefully; never use metal instruments to pry apart the cabinet.

Description	Picture Description	Screws
1. Place the TV face down on cushioned table. Remove screws from the Stand. Remove stand.		
		
		

3. Disassembly and Reassembly

Description	Picture Description	Screws
2. Remove the screws of rear-cover.		 
3. Lift up the rear-cover.	 	
4. Remove the screws of IP and main board.		 

Description	Picture Description	Screws
5. Remove the speakers and screws of inlet socket.		
6. Remove the screws of Stand BKLT. Lift up the Stand BKLT.		 
7. Remove the screws on Panel.		 
		

※ Reassembly procedures are in the reverse order of disassembly procedures.